



# FOODSAFE FRIDGE/FREEZER THERMOMETER



Operating Instructions

**INSTRUMENT OPERATION** - Hang or place the thermometer on the middle shelf, towards the back of the fridge or freezer. Like food, the thermometer will take a while to reach the appliance temperature. Check the fridge is at the correct temperature (between 0 and 5 °C), or freezer (between -18 and -25 °C). If it is above this range, turn the fridge or freezer thermostat down, until the optimum temperature is obtained.

**GUARANTEE** - This instrument carries a one-year guarantee against defects in either components or workmanship. During this period, products that prove to be defective will, at the discretion of ETI, be either repaired or replaced without charge. The product guarantee does not cover damage caused by fair wear and tear, abnormal storage conditions, incorrect use, accidental misuse, abuse, neglect, misapplication or modification. Full details of liability are available within ETI's Terms & Conditions of Sale at [etiltd.com](http://etiltd.com). In line with our policy of continuous development, we reserve the right to amend our product specification without prior notice.

Supplied by  
Electronic Temperature Instruments Ltd  
Worthing · West Sussex · BN14 8HQ  
01903 202151 · [sales@etiltd.com](mailto:sales@etiltd.com) · [etiltd.com](http://etiltd.com)



803-900 WEB/17.06.25