




THERMADATA® LITE

Temperature recording thermometers

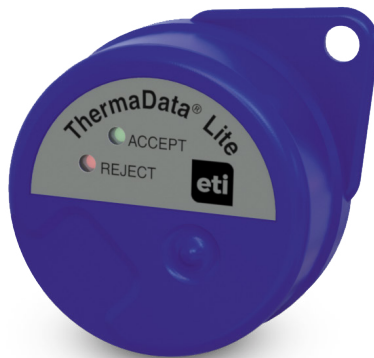

Quick Start Guide

PC SOFTWARE FOR THIS INSTRUMENT

Install the ThermaData® Hub app which can be downloaded free from thermometer.co.uk/pages/software-apps. For further queries, please contact our technical sales team on 01903 202151 or technical@etilt.com

SETTING UP THE LOGGER

Open and log in to ThermaData Hub on your PC. Once logged in, navigate to the sidebar and select 'ThermaData Loggers'. Connect your logger* to the PC using a USB-C® cable and select it from the list of available devices. After selecting the device, click on 'Change device settings' to begin configuring the logger.

**The logger will also pop up as being recognised as a Mass Storage Device on your PC, with a pdf of the log it has recorded automatically download.*

Enter the Instrument name and choose the preferred temperature scale (°C or °F). Adjust the Log Interval, specifying how frequently the instrument will record data in hours, minutes, and seconds.*

**Any log interval rate less 1 minute will severely reduce battery life of the instrument.*

For the 'Start' method, you will need to select from the following options: start with a button press that includes a start delay, or set to start at a specified time or date, or when a specified temperature is reached.

For the 'Stop' method, automatically stopping when the device memory is full (16,000 readings), end the session after a predetermined number of readings, or at a specified time or date.

The user can also enable to stop the logger with a button press (after 5 seconds).

Finally, configure the sensor settings. Set the high and low temperature limits. Press SAVE to send the settings and close the window.

Under General Options, choosing 'Add/Edit Pdf Instructions' allows the user to enter optional Instructions that will appear on the PDF report.

Once all settings are configured and sent to the instrument, the logger will be ready for use.

Start the logger by disconnecting the instrument from the PC and pushing the button (Start at Time or Temperature requires no button push). 4 red and green LED flashes will indicate the start method has been activated.

Pressing the button now will give you 3 red or 3 green LED flashes depending if an alarm has been activated. If the Instrument has not yet met the start criteria there will be 2 alternating red and green LED flashes.

Please note: reconnecting the logger to the PC will stop the logger.

READING THE LOGGER

Open and log in to ThermaData Hub on your PC. Once logged in, navigate to the sidebar and select 'ThermaData Loggers'. Connect your logger to the PC using a USB-C cable and select it from the list of available devices. After selecting the device, click on 'Download Data' to retrieve the data. After the download is complete, name the downloaded log session, then save and close. A list of log sessions will appear at the bottom of the page; click on each session to view the data, which can be displayed in either a table or graph format.

BATTERY CHANGE

This instrument is fitted with a Lithium ½ AA 3.6V non-rechargeable Green Energy battery. Failure to use the same type of battery could result in errors with the instrument. Once a new battery is fitted you must connect your logger to the PC using a USB-C® cable and select it from the list of available devices. After selecting the device, select the 'Factory Reset logger'. This product uses a non-recharge battery.

Note: Due to regular software updates, please visit the software page on our website [etilt.com](https://www.etilt.com) to ensure you have the latest version.



Manufactured by
Electronic Temperature Instruments Ltd
Worthing · West Sussex · BN14 8HQ
01903 202151 · sales@etilt.com · [etilt.com](https://www.etilt.com)

